

<b>2. SPECIFICATIONS AND PERFORMANCE</b>	4
<b>3. EXTERNAL VIEWS</b>	11
<b>4. MAJOR CONSTRUCTION AND NAME OF EACH PART</b>	12
<b>5. DISASSEMBLING AND REASSEMBLING</b>	13
<b>1. Installation and removal of engine</b>	13
A. Removal	13
B. Installation	14
<b>2. Clutch and handle</b>	15
A. Construction of clutch lever (front)	15
B. Removal	15
C. Installation	16
D. Construction of loop handle	16
E. Disassembling	16
F. Reassembling	17
G. Construction of clutch lever (rear) (complete clutch arm unit)	17
H. Disassembling	18
I. Reassembling	19
J. Construction of tension pulley	19
K. Disassembling	19
L. Reassembling	20
<b>3. Adjustable hanger, holder case</b>	20
A. Construction of adjustable hanger	20
B. Disassembling	21
C. Reassembling	21
D. Construction of starting lock lever	22
E. Disassembling	22
F. Reassembling	22
G. Construction of setting shaft	23
H. Disassembling and reassembling	23
I. Construction of holder case	24
J. Disassembling	24
K. Reassembling	25
<b>4. Upper case</b>	25
A. Construction of upper case	25
B. Disassembling	25
C. Reassembling	28
<b>5. Joint tube, propeller, bottom case</b>	29
A. Construction of joint tube	29
B. Disassembling	29
C. Reassembling	30
D. Construction of propeller	30
E. Disassembling	31
F. Reassembling	31
G. Construction of bottom case	32
H. Disassembling	32
I. Reassembling	33